Installation Instructions for the J-Channel LED System




PREPARING THE J-CHANNEL

The J-Channel features a cam attachment system designed to secure the LED to a standard pricing channel. First insure the pricing channel is free of all tags and plastic ID strips. Then using the provided wrench insure that both cams are in the up position, as shown in image to the right.



POSITIONING J-CHANNEL ON SHELF

The back side of the J-Channel includes a ridge that protrudes outward. This ridge is designed to wedge into the top lip of the pricing channel (Step 1). Center the LED on the shelf and insert this ridge into the top of the pricing channel. Once in place, pivot the LED down and flush to pricing channel (Step 2).

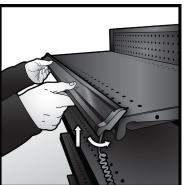

SECURING THE J-CHANNEL TO SHELF

Use one hand to hold the channel to the front of shelf (near the middle) and use your other hand to grab the wrench.

Insert the hexagonal wrench into either of the bolts on the front of the channel and apply a quarter-turn clockwise. You should feel a stop when the cam is secured. Repeat process on the second cam bolt.



COMPLETE INSTALLATION/ACTIVATION

Using the provided wire management magnets, direct the cord back toward power connector on power strip.

Plug cord end into the connector. Adjust magnets as preferred to eliminate any slack and visibility of wiring system. Repeat steps for all additional shelves.









